



## Signs

---

- [Sign Kit](#)
- 

For all **Avery Products**, visit our product catalog at: [avery.com/us/products](http://avery.com/us/products)

**Avery Software Support:** 1.888.835.8379

**Avery Product Support:** 1.800.GO.AVERY (1.800.462.8379)



# Signs

## Sign Kit



1 Load Avery® DesignPro® Sign Edition Software CD.



2 Design Sign.




3 Print Sign.



4 With the printed side facing up, peel off sheet. Leave center backing attached to sheet for now.



5 Position first sheet on center guide, applying pressure along one edge.

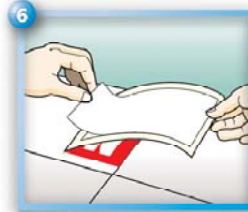

6 Peel center backing from back of sheet.



7 Smooth out any wrinkles. Sheets are repositionable so you can realign as necessary.



8 With next sheet, repeat steps 4-7. Match graphics up. Sheet edges overlap for a virtually seamless look.




9 Repeat process with rest of sheets until sign is done.



10 For all outdoor signs, slide sign into weather resistant sleeve for protection against sun, wind and rain.



11 For the ground stake, insert metal stake into bottom of sign, and insert other end into ground.

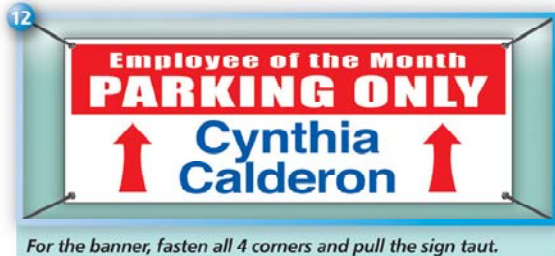

12 For the banner, fasten all 4 corners and pull the sign taut.

[\[BACK TO TOP\]](#)

For a demo of the Sign Kit, visit: [avery.com/us/products/signs/demo.html](http://avery.com/us/products/signs/demo.html)