

Inkjet Printable Fabric Instructions



STOP!

- · Please read all directions below
- Questions? Call us at 800-GO-AVERY (800-462-8379)

Personalize memory quilts, pillows, tote bags, aprons, album covers and more. Printable fabric allows you to add family photos, quotes and graphics to just about any project. Avery Inkjet Printable Fabric Sheets can be sewed or ironed onto a variety of materials.

100% cotton printable fabric features heat-sealed backing that bonds to fabric, cardboard, wood and other porous surfaces. No specialized tools needed, heat seal backing is activated with a simple household iron.

Visit **avery.com** for easy-to-use design tools, templates, how-to videos and other tips for using heat-transfer products from Avery. Follow the steps below for best results. *Note: results may vary based on fabric type, ironing equipment, temperature settings and wash methods.*

Dos & Don'ts of Printable Fabric Sheets:

- Don't use a laser printer.
- Don't use steam in the iron.
- **Don't** use an ironing board, glass, granite, concrete or other heat sensitive or heat-retaining surfaces.



• Do follow washing instructions before wearing.





Items Needed:








Household iron



Waist-high smooth heat-resistant surface



Large cotton pillowcase




Bonds best to 100% cotton or poly/cotton blend fabric

1. Design & Print



Design

 Go to avery.com/templates and customize your design, using our free templates and online design tools.




Print

- Test print your design on plain paper.
- Print on the matte fabric side. The glossy side is the heat seal backing.
- Feed one fabric sheet at a time.
- Allow printed fabric sheet to dry completely. Drying time may vary.




2. Prep & Ironing

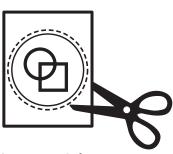

Trim Material

- Cut out the design with a narrow margin around image.
- Keep edges rounded (if possible) to avoid lifting during ironing and washing.

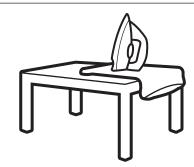

Prep workspace

- Place a pillowcase down on a hard, heat-resistant surface, not an ironing board. A wooden table is best.
- Be sure the iron does not have water in it and the steam setting is off.
- Set the iron to cotton setting and preheat for 5 minutes.
- Iron the pillowcase and fabric to remove wrinkles.
- Be sure to follow all iron safety precautions. Do not leave iron unattended. Leaving iron resting on ironing surface or materials may result in personal injury and/or damage to both project and ironing surface.



Ironing

- Place the fabric sheet face up on fabric in desired location.
- Iron the fabric sheet, applying firm pressure in all areas.
- Be sure to iron over all the edges making sure they are sealed
- Turn off the iron when finished.

Ironing Time:

Image Size	Ironing Time
Full sheet	3 minutes
1/2 sheet	1 ½ minutes
1/4 sheet	45 seconds

3. Finishing & Care



Finish transfer

- After ironing, remove your fabric from the heating area and allow to cool for 2-3 minutes.
- If image begins to lift, re-iron image focusing on lifting areas.



Care and Maintenance

- Wait 24 hours before washing fabric.
- To wash fabric:
 - Machine wash cold separately from other clothes.
 - For best results, hand wash in cold water with color-safe mild detergent.
 - Do not use bleach.
 - Lay flat to dry.
 - Transferred image is not intended to withstand stretching other than normal use.

©2019 Avery Products Corporation. All rights reserved. Avery is a registered trademark of CCL Label, Inc. Avery and all other Avery brands, product names and codes are trademarks of CCL Label.